

VS1000 Button-Cell Player

ver. 1.5 / December 2009

Overview

- Ogg Vorbis format for best quality and low bitrates
- 4MByte SPI FLASH for boot code and audio content
- Single CR2032 battery
- Continuous playing time 4 hours
- Total playing time over 6 hours
- Low-power pause with automatic power off



Applications

- Entrance ticket bundled audio guide (museums, sightseeing tours)
- Solar cell operated audio guide
- Intelligent clothing
- Promotional tool (new product audio presentation)
- Novelty item
- Intelligent toy

Block Diagram



- Very simple
- BOM less than 3 USD in mass production

Features

Voice Player

- Up to 55 minutes of mono voice in 4-megabyte SPI FLASH
- Content can be preprogrammed or can be loaded via USB
- 6 MHz internal clock for very low power consumption
- 6 to 22 kHz sample rates, 10 to 41 kbit/sec bitrates

Extended Player

- 6 MHz or 12 MHz internal clock, requires slightly more power
- Higher clock allows one or more extra features:
 - Stereo (24kHz stereo, 96kbit/s, -q 5)
 - Higher sample rates (44kHz mono, 70kbit/s, -q 3)
 - EarSpeaker processing (3D sound)

Features (cont.)

Power Consumption

- Depends on headphones, volume, and audio material
- Tested with 30-Ohm headphones and a talk radio program with default volume level
- Active mode (voice player): 6.0-7.0 mA
- Low-power pause mode: 0.425 mA
- Power-off mode: 0.0 μA
- Pause between tracks increases the total playing time
- Active mode (extended player): 9 mA

Battery Life



User Interface

Voice Player

- POWER power on, pause/play, power off (long press)
- PREV start of track or previous track, rewind (long press)
- NEXT next track, fast forward (long press)
- VOL+ VOL- volume up and down
- FEATURE not used in voice player

Extended Player

- POWER, PREV, NEXT, VOL+, VOL- like in voice player
- FEATURE EarSpeaker mode, random play (long press)

Operation

Player operation:

- Turn sw7 to BAT position
- Attach headphones
- Press POWER button (sw6) to start player
- Press POWER for a couple of seconds to turn off player

USB operation:

- Turn sw7 to USB position (disconnects battery)
- Attach USB cable
- Press POWER button (sw6) to start player
- Copy files
- Detach USB cable

Do you want to customize?

Our support will help you

email: support@vlsi.fi tel. +358 3 3140 8222 fax. +358 3 3140 8288