


Use VS1005 internal flash as USB disk.

# TOP VIEW

Connect USB to MINI USB connector at TOP side of board !

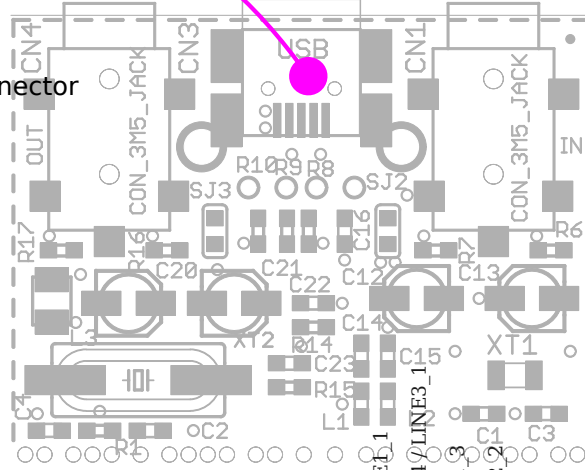


PWM	88	87	GND_USB
USBN	86	85	USBP
AVDD1	84	83	LEFT
CBUF	82	81	NC
RIGHT	80	79	AVDD0
RCAP	78	77	AGND
RF_P	76	75	RF_N
AVDDRF	74	73	MIC1N / LINE1_1
MIC1P / LINE1_2	72	71	MIC2N / AUX4 / LINE3_1
MIC2P / AUX3 / LINE3_2	70	69	AUX2 / LINE1_3
AUX1 / LINE2_1	68	67	AUX0 / LINE2_2

Stereo line in : LINE1\_1 + LINE1\_2

Alternate stereo line in : LINE3\_1 + LINE3\_2

Alternate stereo line in : LINE2\_1 + LINE2\_2

Connect pin9 and pin7 for USB operation.

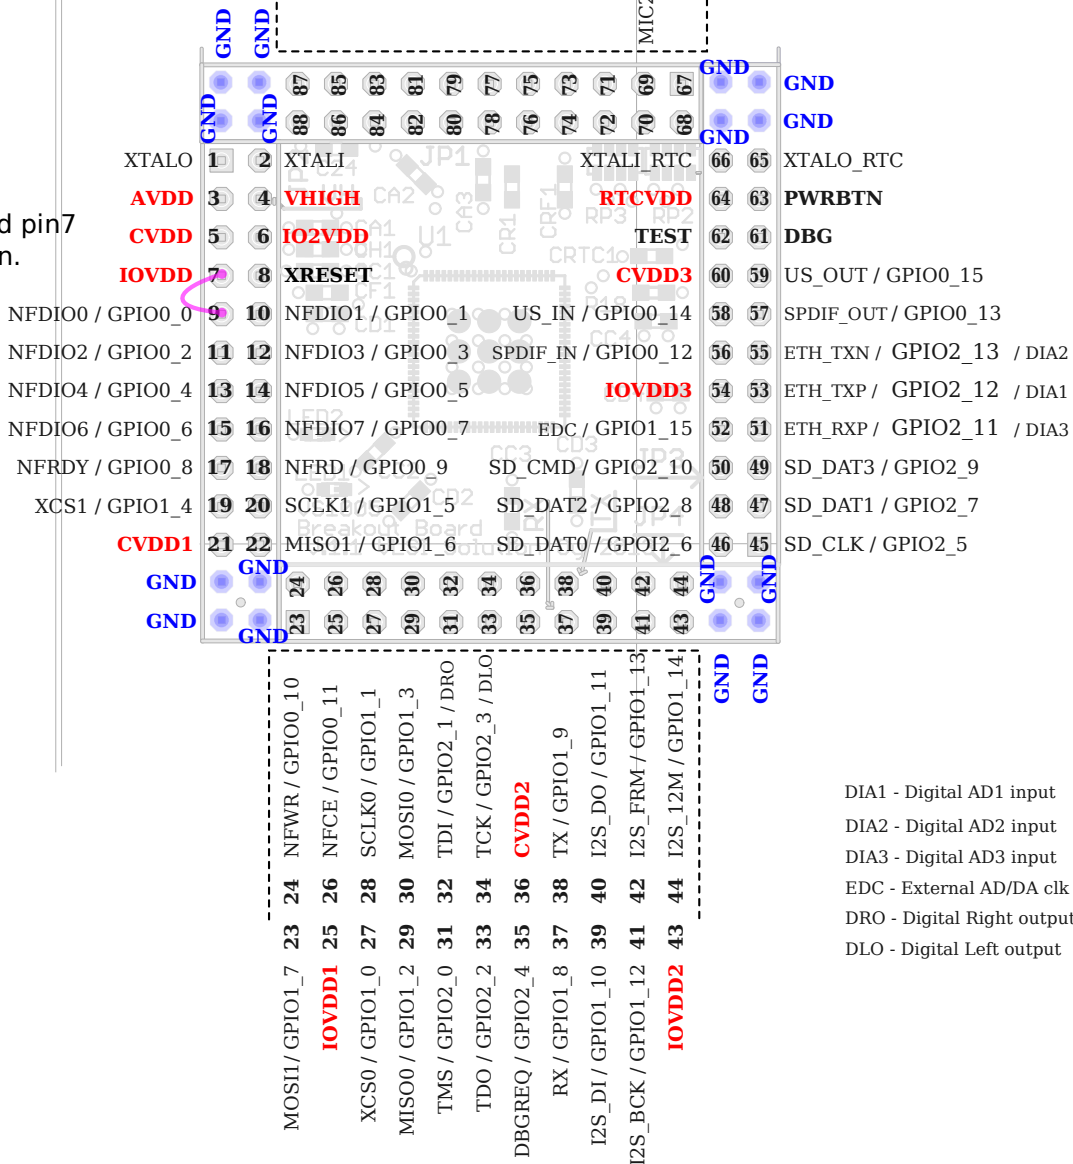

DIA1 - Digital AD1 input  
 DIA2 - Digital AD2 input  
 DIA3 - Digital AD3 input  
 EDC - External AD/DA clk  
 DRO - Digital Right output  
 DLO - Digital Left output